




INSTALLATION AND MAINTENANCE MANUAL

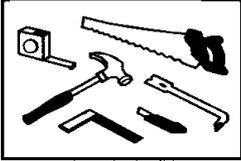


1. Tools

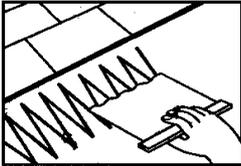


2. Adhesive application over the entire surface

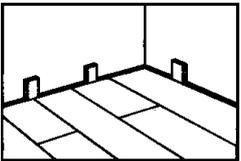


3. Edge gaps

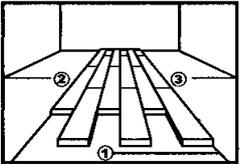


4. Parallel installation

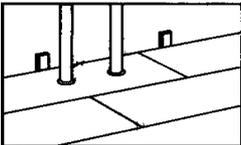

5. Cut at the pipe level

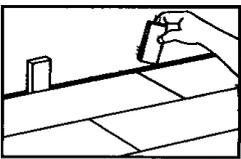

6. Remove the wedges after installation

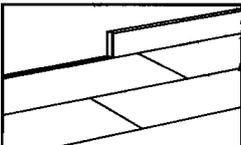

7. The mouldings fill the freed gaps

STORAGE

After purchasing, solid flooring should be stored in a closed and dry place with a temperature between 15-25 ° C. Before installation, you should store solid flooring min 48 hours at room temperature (18-20 ° C) with a 50-60% humidity. Humidity in the elements of solid flooring should be 9% ($\pm 2\%$). It is advisable to harmonize the shades in the room. Before the installation of solid flooring, all finishing works must be completed and the walls completely dry. After the installation of solid flooring, Spačva no longer accepts claims.

METHODS

Glued down - the screed must be firm and flat, free of cracks and clean. The maximum humidity of the screed must not exceed 2%. You should use two-component polyurethane elastic adhesive with mandatory compliance with the Manufacturer's adhesive instructions. Due to the dimensions, you need to use mounting straps (clamps) which keep the diaphragms paired until the adhesive has clamped the diaphragms, because it is not possible to nail flooring into the screed.

Nailed down - first lay steam resistant floor plywood or OSB boards with minimum thickness 18 mm on adry screed and in accordance with the manufacturer's instructions of the materials used. The boards are nailed into the tongue at an angle of 45 °. A two-component adhesive is also recommended because the nails fasten the boards until the glue hardens. This method allows a very fast installation of solid flooring.

Solid flooring must be carefully installed, therefore it is advisable that it is done by a professional and qualified flooring installer.

Since wood is a natural material with naturally occurring differences in colour, it is advisable, before the installation, to open several packages, mix the boards and match the colours in the room.

BEFORE THE INSTALLATION

Make sure the room is dry and closed and windows glazed. The temperature should be between 18 and 20 ° C and the relative humidity between 50% and 60%.

AFTER THE INSTALLATION

After the installation, leave the solid flooring 7 to 10 days to "cool down" and adjust to the room. Preserve the temperature and relative air humidity. Solid flooring is maintained with a dry or a damp cloth and by using appropriate cleaners for maintenance of wood surfaces. Properly installed and maintained solid flooring lasts a lifetime.